



S.N.	Name	Remarks
①	BMS Cable	Connect to "IN" Port of Master battery. (Cable length: 50 cm)
②	Ethernet	Connect to router through network cable
③	Antenna	Wireless WiFi Hotspot Amplifier
④	Indicator*	Show the status of working mode.

### \* Indicator State:

- Solid OFF: Non-Connection
- Solid ON: Local Communication (AP);
- Flash Flowly: Connecting Internet (STA)
- Flash Quickly: Data in transit;

Specification	Values
Dimension (W x D x H)	98 x 54 x30 (mm)
Working Mode*	AP / STA
Protocol	IEEE 802.11b/g/n
Bands	2.4G
Number of Accessed Devices	1
Interface	RJ45
Indicator	LED
IP Rating	IP40
Typical Consumption	27~44 mA
Operating Temperature Range	-30°C~+65 °C
Operating Humidity	5%~95% (Non-condensing)
Communication Cable	Cat5 or Higher

### \* Work Mode Priority:

- **AP(Local Access)**: Connect the hotspot of the SIMPO WIFI with a mobile device to work in AP mode.
- **STA(To Internet)**: There are two options to connect to the internet with SIMPO WIFI
  1. Connect SIMPO WIFI to the router directly with a network cable.
  2. Set up a wireless connection for SIMPO WIFI dongle through ZYC Assist APP

## Connect to Internet & WiFi Usage & ZYC Portal & ZYC Assist APP

